



# Teseo-LIV3F Firmware Upgrade

Version 1.1



#### Contents

1 Download the firmware

2 Upgrade Teseo-LIV3F on EVB-LIV3F

Upgrade Teseo-LIV3F on X-Nucleo-GNSS1A1

Documents & related resources



3



#### Download the firmware

1 Download the firmware

2 Upgrade Teseo-LIV3F on EVB-LIV3F

Upgrade Teseo-LIV3F on X-Nucleo-GNSS1A1






### Search the firmware

- 1 Search for TESEO-LIV3FSW in st.com
- 2 Execute the query



3 Select the correct entry

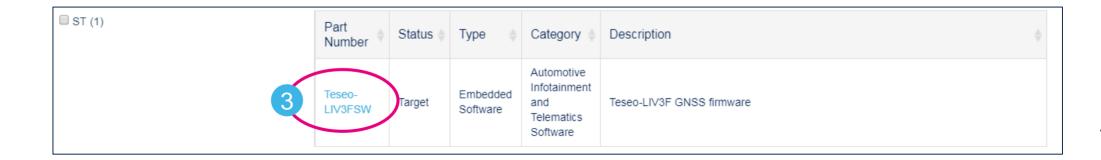






### Download the firmware to the PC

- 1 On the Teseo-LIV3FSW page
- 2 Click Get Software to download the firmware (Login and License agreement are required)

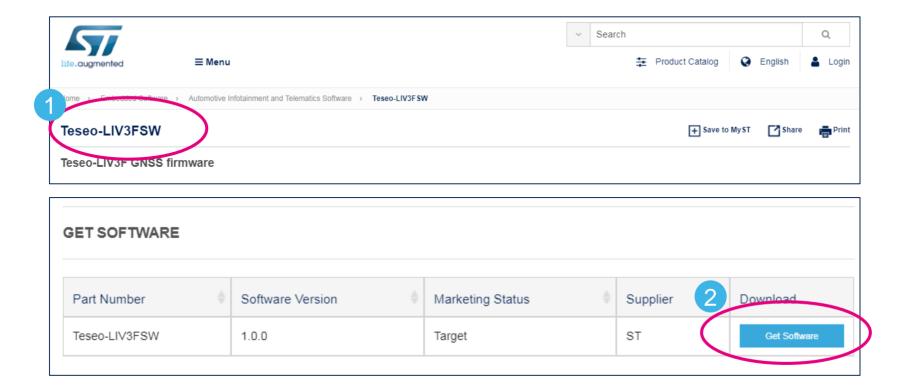







## Prepare the binary file

- 1 In the User/Download folder
- 2 Find the file
- 3 Unzip the file

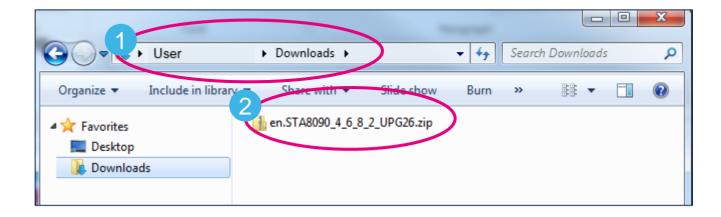

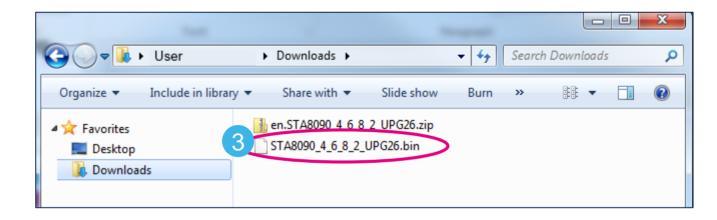





## Upgrade EVB-LIV3F

1 Download the firmware

2 Upgrade Teseo-LIV3F on EVB-LIV3F

Upgrade Teseo-LIV3F on X-Nucleo-GNSS1A1






### Connect and start EVB-LIV3F

- Connect the USB cable between your PC and the UART port of the EVB-LIV3F evaluation board
- 2 Press the evaluation board's power-on button
- Verify that the RED Power LED is ON



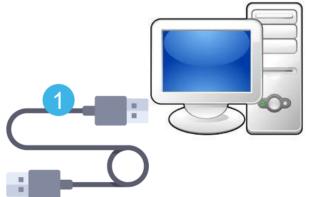






## Teseo-Suite: Firmware Update

- Open the Firmware Upgrade panel in the Teseo-Suite PC software tool
- 2 Select the binary file from the file directory
- 3 Select the correct COM Port and baud rate (115200)
- 4 Set Erase and Recovery
- 5 Click Start to update the firmware
- 6 Press **Reset** on the EVB-LIV3F board

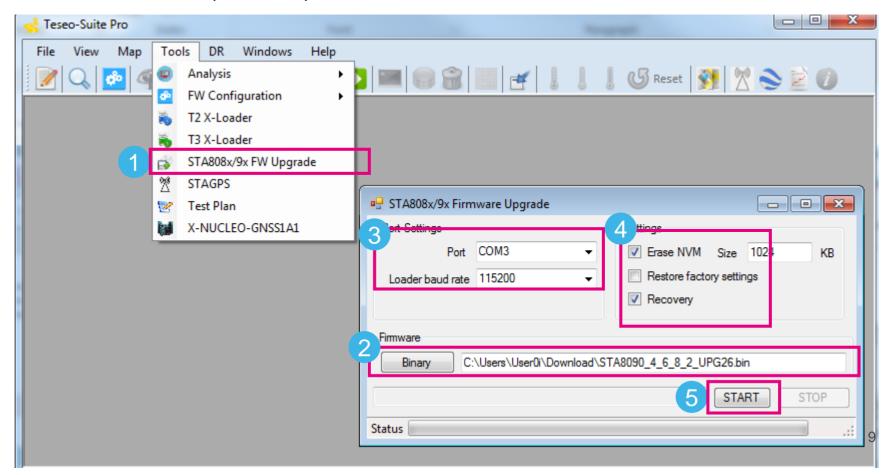





## **Upgrade X-NUCLEO-GNSS1A1**

1 Download the firmware

2 Upgrade Teseo-LIV3F on EVB-LIV3F


Upgrade Teseo-LIV3F on X-NUCLEO-GNSS1A1





### Teseo-Suite: X-NUCLEO-GNSS1A1

- 1 Select "X-NUCLEO-GNSS1A1"
- 2 Click "Update my STM32-Nucleo board..."

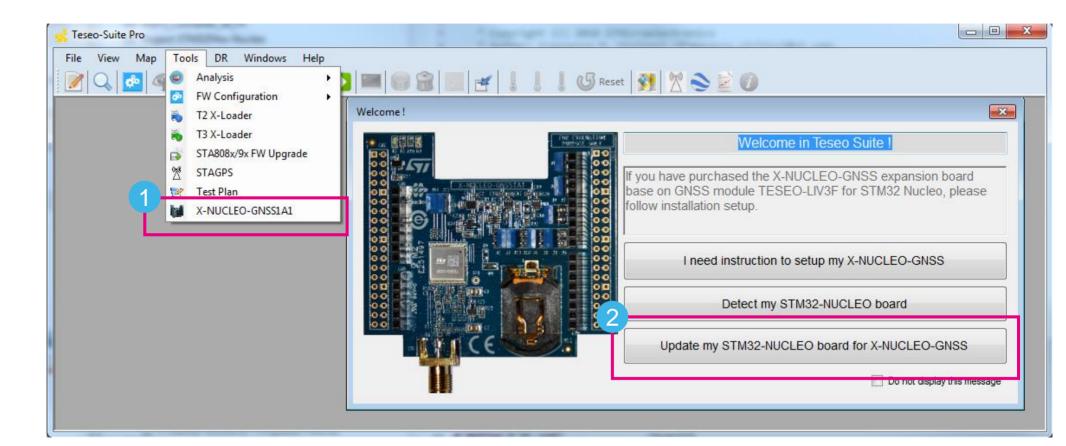






### Select STM32 firmware

- 1 Select the required STM32 firmware based on the platform:
  - xxx\_FirmwareUpdateI2C.bin: to update firmware on a Teseo III Module via the STM32.I2C port
  - xxx\_FirmwareUpdateUART.bin: to update firmware on a Teseo III Module via the STM32.UART port
- 2 Install the STM32 firmware

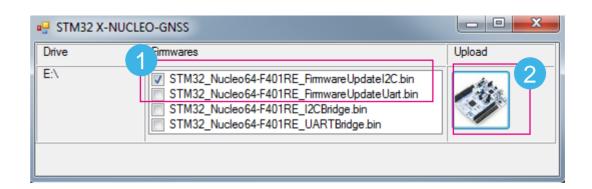






## Teseo-Suite: Firmware Update

- 1 Open the Firmware Upgrade panel in the Teseo-Suite PC software tool
- 2 Select the binary file from the file directory
- 3 Select the correct COM Port and baud rate (115200)
- 4 Set Erase and Recovery
- 5 Click Start to update the firmware
- 6 Press Reset on the X-Nucleo board

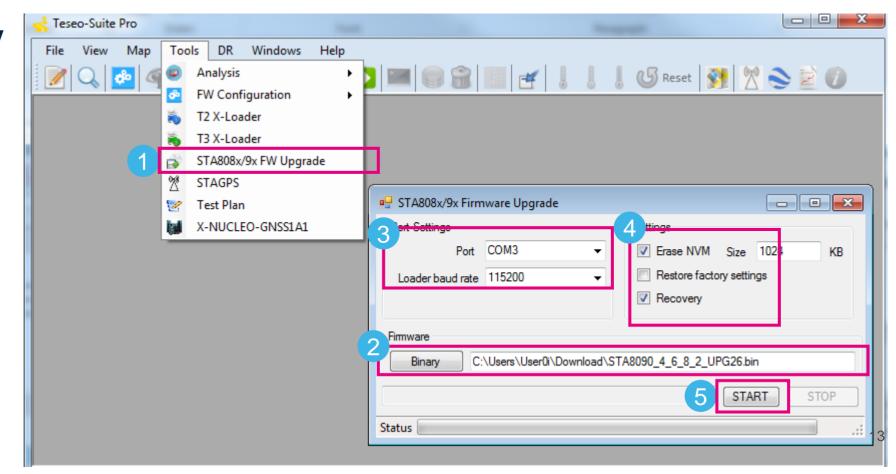





#### Documents and related resources

1 Download the firmware

2 Upgrade Teseo-LIV3F on EVB-LIV3F

B Upgrade Teseo-LIV3F on X-Nucleo-GNSS1A





#### Documents & related resources

# All documents are available on: www.st.com/gnss

- Teseo-LIV3F: Webpage
  - Datasheet
  - User Manuals
- X-Nucleo-GNSS1A1: Webpage
  - Datasheet
- Teseo-Suite: Webpage
  - Datasheet
  - Install program



15



5/14/2020