


cover the side vias with solder

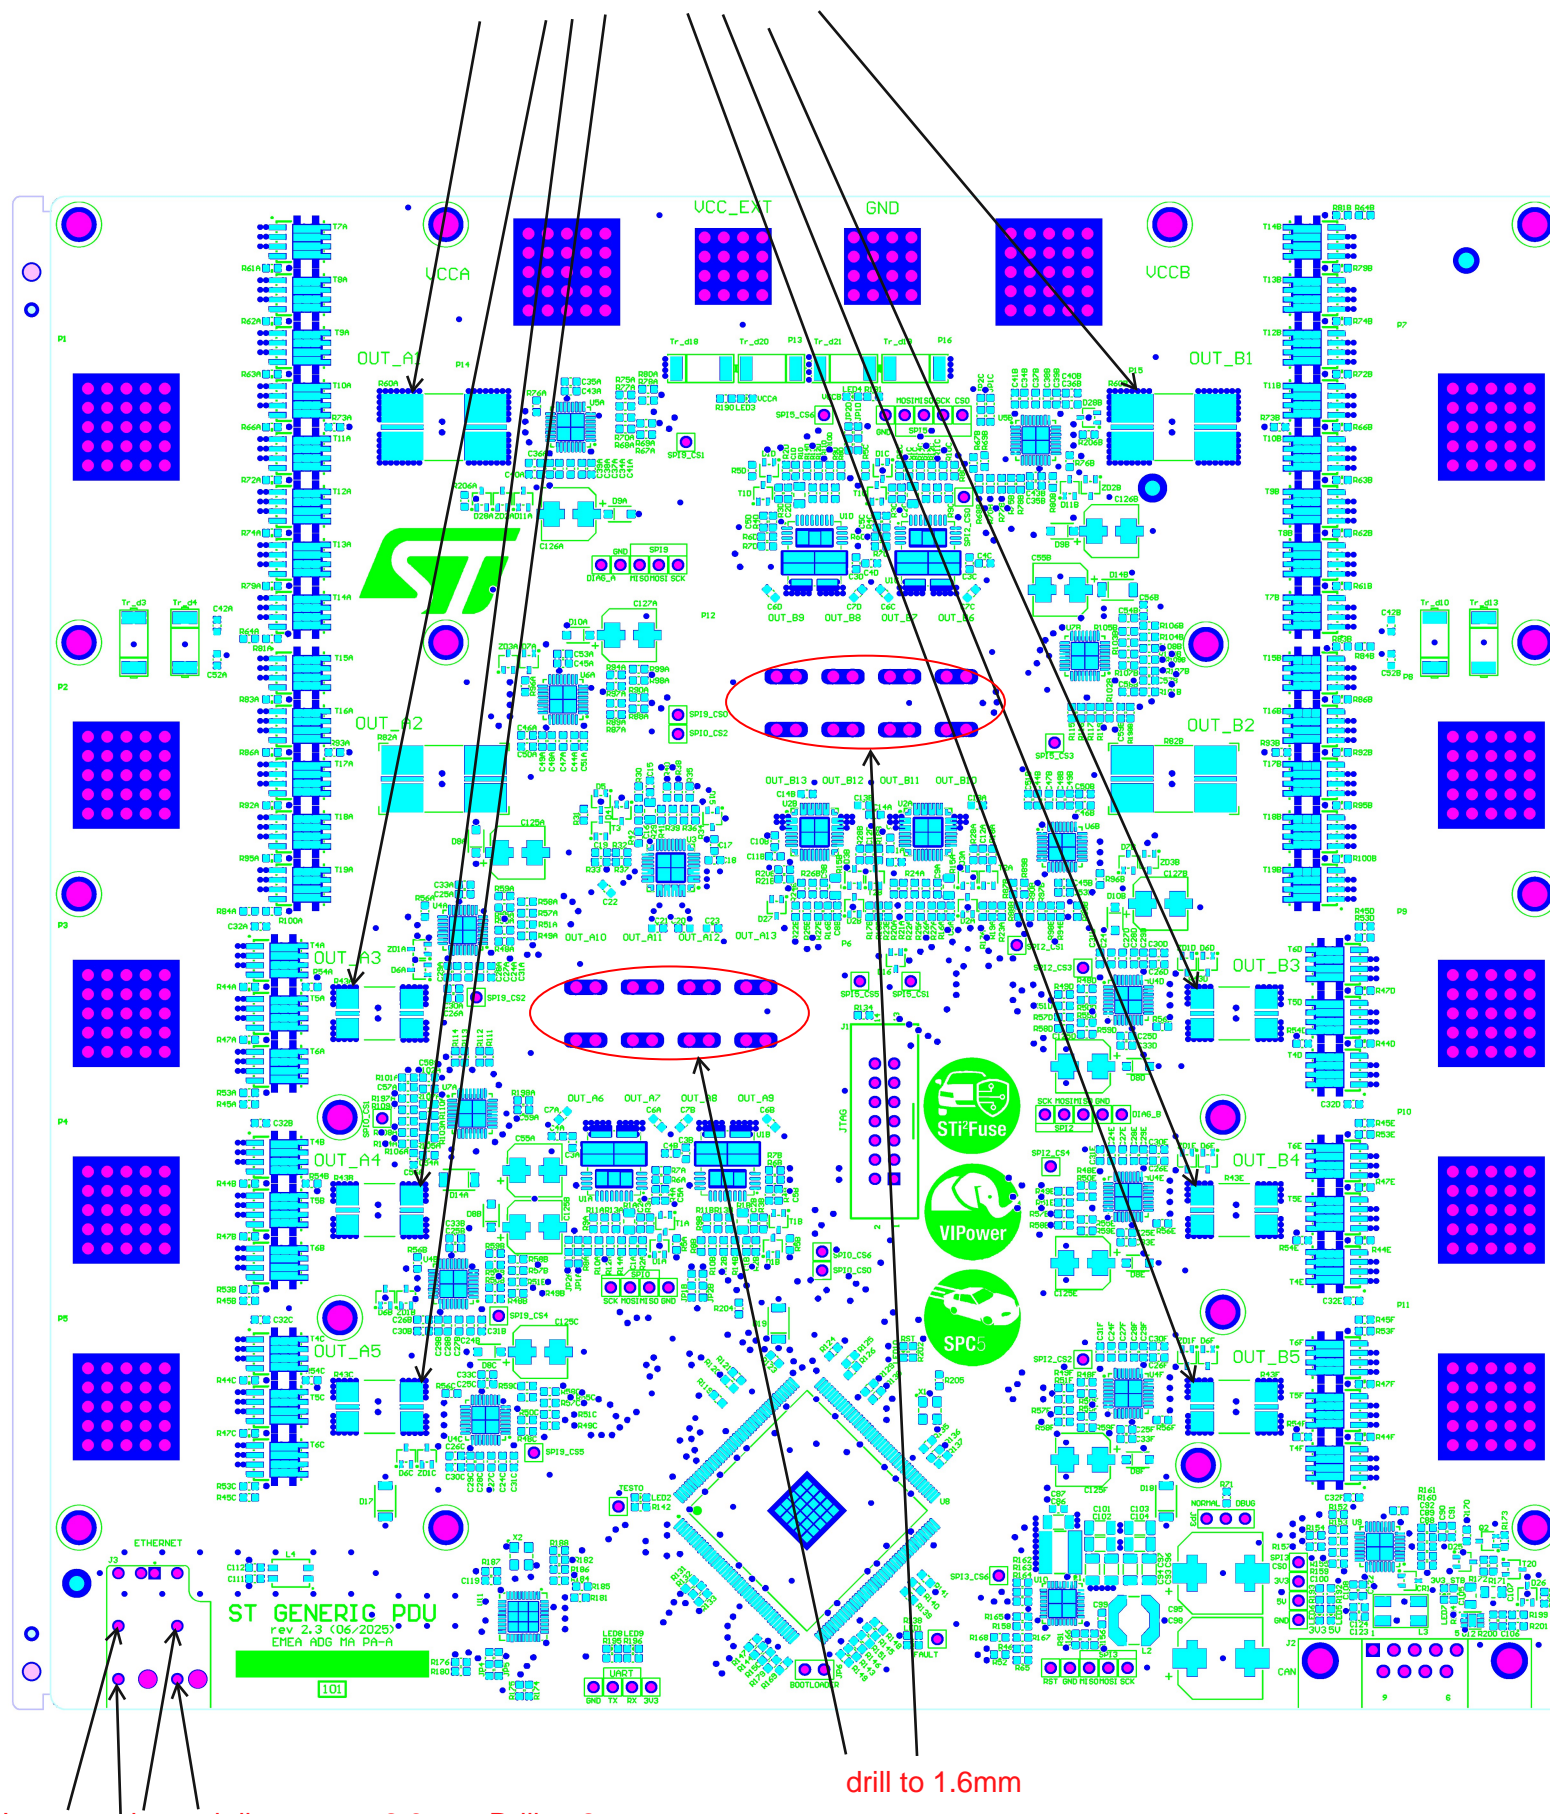

drill to 1.6mm

Increase the pad diameter to 2.6mm; Drill to 2mm