

# UM2479 User manual

Getting started with X-NUCLEO-NFC03A1 NFC card reader board based on ST25R95 for STM32 Nucleo

#### Introduction

The X-NUCLEO-NFC03A1 is a near field communication (NFC) card reader evaluation board based on the ST25R95, designed for expansion of STM32 Nucleo boards.

The ST25R95 is an integrated circuit (IC) for contactless applications. It provides the 13.56 MHz air interface, frame coding and decoding for standard applications such as NFC. The ST25R95 communicates with the host through UART or SPI interface.

The X-NUCLEO-NFC03A1 is compatible with the Arduino<sup>™</sup> UNO R3 connector assignment.

This expansion board can be plugged into the Arduino<sup>™</sup> UNO R3 connectors of any STM32 Nucleo board. The different expansion boards can be easily stacked to allow users to evaluate different devices with NFC card reader.

The board (shown in Figure 1) features:

- the ST25R95 NFC card reader IC
- a 47 mm x 34 mm, four turns, single layer 13.56 MHz inductive antenna etched on PCB, and its associated tuning circuit
- four general purpose LEDs.



Figure 1. NFC card reader board based on ST25R95

March 2019 UM2479 Rev 2 1/17

Contents UM2479

# **Contents**

1	Gett	Getting started					
	1.1	Hardw	vare requirements	5			
	1.2	Syster	m requirements	6			
	1.3	Setting	g up the board	6			
2	Hardware description						
	2.1	X-NU(	CLEO-NFC03A1 board	7			
	2.2	Host in	nterface and GPIO connection	8			
	2.3	X-NU(	CLEO-NFC03A1 component placement	9			
3	Component description						
	3.1	ST25F	R95	10			
4	Sch	ematics	·	11			
5	Bill	of mate	rials	13			
6			mmunications Commission (FCC) and inada (IC) compliance statements	15			
	6.1	_	Compliance Statement				
		6.1.1	Part 15.19				
		6.1.2	Part 15.21	15			
		6.1.3	FCC ID	15			
	6.2	Forma	al notices required by the Industry Canada ("IC")	15			
		6.2.1	Compliance Statement	15			
		6.2.2	Declaration de Conformité	15			
		6.2.3	IC ID	15			
7	Revi	ision his	story	16			



UM2479 List of tables

# List of tables

Table 1.	Interconnections between the two boards (left side)	7
Table 2.	Interconnections between the two boards (right side)	8
Table 3.	ST25R95 details	0
Table 4.	Bill of materials	3
Table 5.	Document revision history	6



List of figures UM2479

# **List of figures**

Figure 1.	NFC card reader board based on ST25R95	. 1
Figure 2.	X-NUCLEO-NFC03A1 board plugged on an STM32 Nucleo board	
	through Arduino™ UNO R3 connectors	. 5
Figure 3.	X-NUCLEO-NFC03A1 component placement	. 9
Figure 4.	Nucleo connectors	11
Figure 5.	General purpose LEDs	11
Figure 6.	ST25R95 and matching circuitry	12



UM2479 Getting started


## 1 Getting started

This section describes the hardware and system requirements for the X-NUCLEO-NFC03A1 evaluation board.

## 1.1 Hardware requirements

The X-NUCLEO-NFC03A1 is an expansion board that can be used with STM32 Nucleo boards. To operate correctly it must be connected to the STM32 Nucleo board, as shown in *Figure 2*.

Figure 2. X-NUCLEO-NFC03A1 board plugged on an STM32 Nucleo board through Arduino <sup>™</sup> UNO R3 connectors

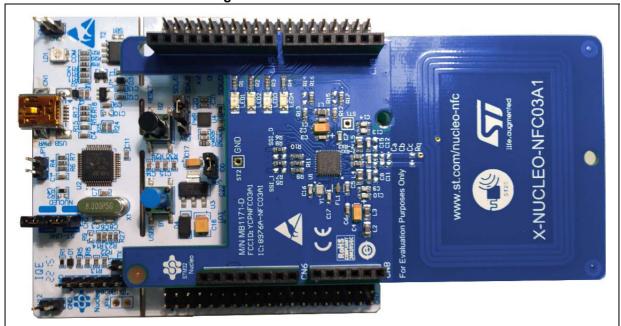

The X-NUCLEO-NFC03A1 is designed for use with any STM32 Nucleo board, even if complete testing has been performed using the NUCLEO-F401RE hosting the STM32 microcontroller, based on an  $\operatorname{Arm}^{\circledR(a)}$  core.

The STM32 Nucleo firmware and the related documentation are available at http://www.st.com/stm32nucleo.

arm

UM2479 Rev 2 5/17

\_

a. Arm is a registered trademark of Arm Limited (or its subsidiaries) in the US and/or elsewhere.

Getting started UM2479

## 1.2 System requirements

To use the Nucleo boards with the X-NUCLEO-NFC03A1 expansion board the following software and hardware are required:

- Windows® PC (XP, Vista, 7, 8) to install the firmware package
- USB type A to Mini-B USB cable to connect the Nucleo board to the PC

To install the board firmware package (order code: X-CUBE-NFC3) the PC must have at least 128 MB of RAM and 40 MB of hard disk space.

The X-CUBE-NFC3 firmware and the related documentation are available on www.st.com.

## 1.3 Setting up the board

To set up the board, perform the following steps:

- connect the X-NUCLEO-NFC03A1 on the Nucleo board from the top as shown in Figure 2
- 2. power the Nucleo board using the Mini-B USB cable delivered with the board
- 3. program the firmware in the STM32 on the Nucleo board using the provided example
- 4. reset the MCU board using the reset button available on the Nucleo board
- 5. the evaluation kit is ready to be used.

# 2 Hardware description

This section describes the X-NUCLEO-NFC03A1 features and provides information to better understand the board schematic diagrams (detailed in Section 4: Schematics).

#### 2.1 X-NUCLEO-NFC03A1 board

The board allows the user to test the functionality of the ST25R95, which supports reader/writer mode and the following communication protocols:

- ISO/IEC 14443 Type A and B
- ISO/IEC 15693
- ISO IEC 18092
- MIFARE<sup>®</sup> Classic<sup>(a)</sup>

Its functionality can be exploited using the firmware package contained in the X-CUBE- NFC3. A key step is to program the microcontroller on the STM32 Nucleo board. Refer to user manuals UM1724 and UM1725, available on <a href="https://www.st.com">www.st.com</a>.

The ST25R95 IC module and the STM32 Nucleo board are connected through connectors CN5, CN6, CN8 and CN9 (see *Table 1* and *Table 2* for details).

Table 1. Interconnections between the two boards (left side)

Signal	Connector	Pin number	NUCLEO-F401RE (MCU port)	X-NUCLEO-NFC03A1 (expansion board)			
NC		1	-	-			
IOREF		2	-	3V3			
RESET		3	-	-			
3V3	CN6	4	-	3V3			
5V	Power	5	-	-			
GND		6	-	GND			
GND		7	-	GND			
VIN		8	-	-			
	-						
A0		1	PA0	-			
A1	CN8 Analog	2	PA1	-			
A2		3	PA4	-			
A3		4	PB0	-			
A4		5	PC1/PB9	-			
A5		6	PC0/PB8	-			

a. MIFARE and MIFARE Classic are registered trademarks of NXP B.V. and are used under license.



UM2479 Rev 2 7/17

Hardware description UM2479

Table 2. Interconnections between the two boards (right side)

Signal	Connector	Pin number	NUCLEO-F401RE (MCU port)	X-NUCLEO-NFC03A1 (expansion board)		
D15		10	PB8	-		
D14		9	PB9	-		
AREF		8	-	-		
GND		7	-	GND		
D13	CN5	6	PA5	SPI_CLK		
D12	Digital	5	PA6	SPI_MISO		
D11		4	PA7	SPI_MOSI		
D10		3	PB6	SPI_CS_NFC		
D9		2	PC7	Interface pin (SSI_0)		
D8		1	PA9	UART_TX/IRQ_IN		
-						
D7		8	PA8	MCU_LED1		
D6		7	PB10	MCU_LED2		
D5		6	PB4	MCU_LED3		
D4	CN9 Digital	5	PB5	MCU_LED4		
D3		4	PB3	-		
D2		3	PA10	UART_RX/IRQ_OUT		
D1		2	PA2	-		
D0		1	PA3	-		

### 2.2 Host interface and GPIO connection

The X-NUCLEO-NFC03A1 board contains the ST25R95-VMD5T chip and is powered by the STM32 Nucleo board.

The ST25R95 is driven by the microcontroller either via the SPI link or via the UART link, selection is ensured by the microcontroller at ST25R95 reset.

The four LEDs connected to the microcontroller GPIOs are general purpose.

# 2.3 X-NUCLEO-NFC03A1 component placement

Figure 3 shows the component placement on the X-NUCLEO-NFC03A1 board.

General purpose **LEDs** ST25R95HF-VMD5T MN MB1171-D GND FCCID YCPNFC03A1I IC: 8976A-NFC03A1 CN4 Matching circuitry www.st.com/nfc-rfid 47 mm x 34 mm 4 turns antenna X-NUCLEO-NFC03A1

Figure 3. X-NUCLEO-NFC03A1 component placement

MS41417V2

# 3 Component description

#### 3.1 ST25R95

The ST25R95-VMD5T is an integrated transceiver IC for contactless applications. It manages frame coding and decoding in Reader mode for applications such as NFC proximity and vicinity standards, and embeds an analog front end to provide the 13.56 MHz air interface. The ST25R95 supports ISO/IEC 14443 Type A and Type B, ISO/IEC 15693 (single or double subcarrier) and ISO/IEC 18092 communication protocols.

Table 3. ST25R95 details

Feature	Description		
Sales type	ST25R95-VMD5T		
Package	32 leads, 5 x 5 mm VFQFPN		
Operating voltage	2.7 to 5.5 Volts		

10/17 UM2479 Rev 2

UM2479 Schematics

## 4 Schematics

Extension connectors 3.3V D15 PB8 D14 PB9 Arduino Connector Arduino Connector 1 2 3 4 5 6 7 8 SPI SCK SPI MISO SPI MOSI D10 PB6 D9 PC7 D8 PA9 /SPI CS NFO Interface Pin UART TX/IRQ IN Header 8X1\_Female Header 10X1\_Female MCU CN8

0

0

1

1

0

3

4


5


6

Header 6X1\_Female PA0 PA1 PA4 PB0 PC1 PC0 D7 PA8
D6 PB10
D5 PB4
D4 PB5
D3 PB3
D2 PA10
D1 PA2
D0 PA3 Arduino Connector MCU LED2 MCU LED3 UART RX/IRQ OUT Header 8X1\_Female

Figure 4. Nucleo connectors



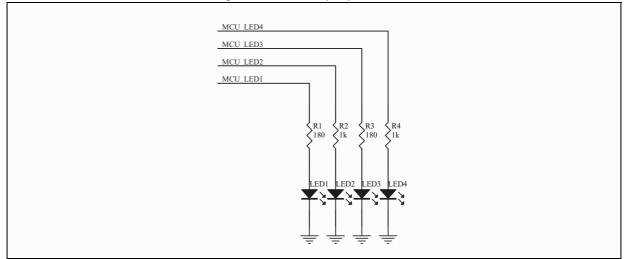

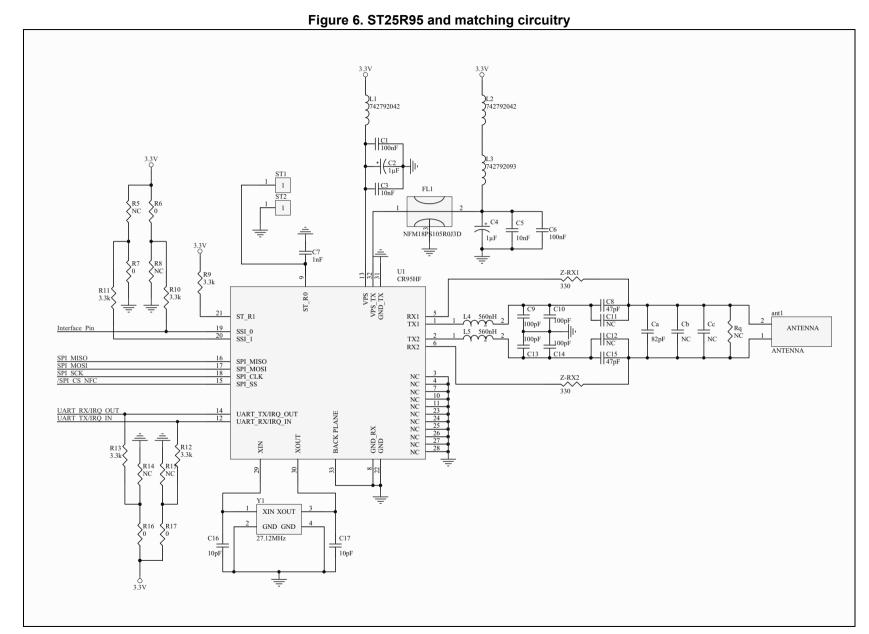



UM2479 Bill of materials

# 5 Bill of materials

Table 4. Bill of materials

Туре	Qty	Description	Reference	Package	Manufacturer	Part number
IC	1	Transceiver	U1	VFQFPN32 5 x 5 mm	STMicroelectronics	ST25R95- VMD5TLBE
Crystal	1	EXS00A- CS01188 27.12 MHz	Y1	NX2016	NDK	NX2016SA 27.12 MHz EXS00A-CS01188
LED	2	Green LED	LED1, LED3	LED-1206	Dialight	5988270107F
LED	2	Blue LED	LED2, LED4	LED-1206	Dialight	5988291107F
Filter	1	Suppression 1 µF 6.3 V DC	FL1	NFM18PS	Murata	NFM18PS105R0J3D
	2	Ferrite CMS 600 Ω	L1, L2		Würth Elektronik	742792042
Inductor	1	Ferrite CMS 2200 Ω	L3	0805	Water Elektronik	742792093
	2	SMD 560 nH	L4, L5		Murata	LQM21NNR56K10D
	5	CMS 0.1 W 5% NC	R5, R8, R14, R15, Rq		-	-
	4	CMS 0.1 W 5% 0 Ω	R6, R7, R16, R17		-	-
Resistor	2	CMS 0.1 W 5% 180 Ω	R1, R3	0603	-	-
VESISIOI	2	CMS 0.1 W 5% 330 Ω	Z-RX1, Z-RX2	0003	-	-
	2	CMS 0.1 W 5% 1 kΩ	R2, R4		-	-
	5	CMS 0.1 W 5% 3.3 kΩ	R9, R10, R11, R12, R13		-	-

13/17

Bill of materials UM2479

Table 4. Bill of materials (continued)

Туре	Qty	Description	Reference	Package	Manufacturer	Part number
	4	MLCC NP0 50 V 2% NC	C11, C12, Cb, Cc		Murata	-
	2	MLCC NP0 50 V 5% 10 pF	C16, C17		-	-
	2	MLCC NP0 50 V 2% 39 pF	C8, C15		Murata 0603	GRM1885C1 H390GA01
	1	MLCC NP0 50 V 2% 82pF	Ca	0603		GRM1885C1 H820GA01
Capacitor	4	MLCC NP0 50 V 2% 100 pF	C9, C10, C13, C14	0603		GRM1885C1 H101GA01
	1	MLCC NP0 50 V 5% 1 nF	C7		-	-
	2	MLCC NP0 50 V 5% 10 nF	C3, C5		-	-
	2	MLCC NP0 50 V 5% 100 nF	C1, C6		-	-
	2	Tantalum SMD POL 10% 1µF 16 V	C2, C4	293D-A	-	-
	1	2.54 mm Single row 10 ways	CN1	10P_FEMALE		SSQ-110-03-L-S
Receptacle	1	2.54 mm Single row 6 ways	CN3	6P_FEMALE	Samtec	SSQ-106-03-L-S
	1	2.54 mm Single row 8 ways	CN2, CN4	8P_FEMALE		SSQ-108-03-L-S
Connector	2	1PT	ST1, ST2	CON_1PTS	FCI	77311-401-36LF

# Federal Communications Commission (FCC) and Industry Canada (IC) compliance statements

## 6.1 FCC Compliance Statement

#### 6.1.1 Part 15.19

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### 6.1.2 Part 15.21

Any changes or modifications to this equipment not expressly approved by STMicroelectronics may cause harmful interference and void the user's authority to operate this equipment.

#### 6.1.3 FCC ID

FCC ID: YCPNFC03A1

## 6.2 Formal notices required by the Industry Canada ("IC")

## 6.2.1 Compliance Statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation.

#### 6.2.2 Declaration de Conformité

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#### 6.2.3 IC ID

IC ID: 8976A-NFC03A1

577

Revision history UM2479

# 7 Revision history

**Table 5. Document revision history** 

Date	Revision	Changes	
18-Sep-2018	1	Initial release.	
14-Mar-2019	2	Replaced ST25R95HF with ST25R95 across the whole document. Updated Section 1.1: Hardware requirements. Updated Table 2: Interconnections between the two boards (right side).	

#### **IMPORTANT NOTICE - PLEASE READ CAREFULLY**

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgement.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of Purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2019 STMicroelectronics - All rights reserved



UM2479 Rev 2 17/17