



0 to 40 kPa, differential compensated pressure sensor

**Chip Pak package
Back view**



Front view

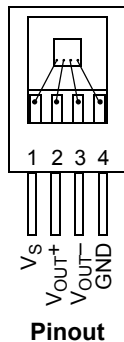

Features

- Integrated temperature compensation and calibration
- Ratiometric to supply voltage
- Polysulfone case material (ISO 10993)
- Provided in easy-to-use tape and reel

Applications

- Medical diagnostics
- Infusion pumps
- Blood pressure monitors
- Pressure catheter applications
- Patient monitoring

Description

The MPX23001 is a high volume, miniature pressure sensor package, which is ideal as a submodule component or a disposable unit.

The unique concept of the Chip Pak allows great flexibility in system design while providing an economic solution for the designer. This new chip carrier package uses a unique sensor die with piezoresistive technology, along with the added feature of on-chip, thin-film temperature compensation and calibration.

Note: *The die and wire bonds are exposed on the front side of the chip pak (pressure is applied to the back side of the device). Front side die and wire protection must be provided in the customer's housing. Use caution when handling the devices during all processes.*



1 Ordering information

Ordering information						
Device name	Shipping	Package	Pressure type			Device marking
			Gauge	Differential	Absolute	
MPX2300DT1	Tape and reel	Chip Pak		•		XXXX= Device code XXX = Trace code

2 General description

The MPX2300DT1 pressure sensor has been designed for medical usage by combining the performance of ST's shear stress pressure sensor design and the use of biomedically approved materials. Materials with a proven history in medical situations have been chosen to provide a sensor that can be used with confidence in applications, such as invasive blood pressure monitoring. It can be sterilized using ethylene oxide. The portions of the pressure sensor that are required to be biomedically approved are the rigid housing and the gel coating.


The rigid housing is molded from a white, medical grade polysulfone that has passed extensive biological testing including: ISO 10993-5:1999, ISO 10993-10:2002, and ISO 10993-11:1993.

A silicone dielectric gel covers the silicon piezoresistive sensing element. The gel is a nontoxic, nonallergenic elastomer system, which meets all USP XX Biological Testing Class V requirements. The properties of the gel allow it to transmit pressure uniformly to the diaphragm surface, while isolating the internal electrical connections from the corrosive effects of fluids, such as saline solution. The gel provides electrical isolation sufficient to withstand defibrillation testing, as specified in the proposed Association for the Advancement of Medical Instrumentation (AAMI) Standard for blood pressure transducers. A biomedically approved opaque filler in the gel prevents bright operating room lights from affecting the performance of the sensor.

2.1 Block diagram

Figure 1 shows a block diagram of the internal circuitry integrated on a pressure sensor chip.

Figure 1. Block diagram

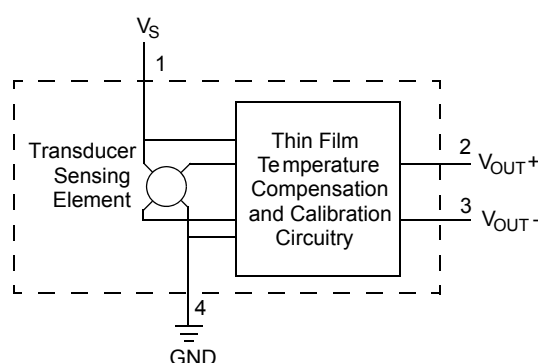

2.2 Pinout

Figure 2. Device pinout




Table 1. Pin functions

Pin	Name	Function
1	V_S	Voltage supply
2	V_{OUT+}	Output voltage
3	V_{OUT-}	Output voltage
4	GND	Ground

3 Mechanical and electrical specifications

3.1 Maximum ratings

Table 2. Maximum ratings⁽¹⁾

Rating	Symbol	Value	Unit
Maximum pressure (backside)	$P_{\max}$	125	PSI
Storage temperature	T_{stg}	-25 to +85	°C
Operating temperature	T_A	+15 to +40	°C

Note: (1) Exposure beyond the specified limits may cause permanent damage or degradation to the device.

3.2 Operating characteristics

Note: $V_S = 6 V_{DC}$, $T_A = 25^\circ\text{C}$ unless otherwise noted


Table 3. Operating characteristics

Characteristics	Symbol	Min	Typ	Max	Unit
Pressure range	P_{OP}	0	—	300	mmHg
Supply voltage ⁽¹⁾	V_S	—	6.0	10	VDC
Supply current	I_O	—	1.0	—	mAdc
Zero pressure offset	V_{OFF}	-0.75	—	0.75	mV
Sensitivity	—	4.95	5.0	5.05	mV/V/mmHg
Full-scale span ⁽²⁾	V_{FSS}	2.976	3.006	3.036	mV
Linearity + Hysteresis ⁽³⁾	—	-1.5	—	1.5	% V_{FSS}
Accuracy $V_S = 6 V$, $P = 101$ to 200 mmHg	—	-1.5	—	1.5	%
Accuracy $V_S = 6 V$, $P = 201$ to 300 mmHg	—	-3.0	—	3.0	%
Temperature effect on sensitivity	T_{CS}	-0.1	—	+0.1	%/°C
Temperature effect on full-scale span ⁽⁴⁾	TCV_{FSS}	-0.1	—	+0.1	%/°C
Temperature effect on offset ⁽⁵⁾	TCV_{OFF}	-9.0	—	+9.0	mV/°C
Input impedance	Z_{IN}	1800	—	4500	Ω
Output impedance	Z_{OUT}	270	—	330	Ω
R_{CAL} (150 k Ω) ⁽⁶⁾	R_{CAL}	97	100	103	mmHg
Response time ⁽⁷⁾ (10% to 90%)	t_R	—	1.0	—	ms

1. Recommended voltage supply: $6 V \pm 0.2 V$, regulated. Sensor output is ratiometric to the voltage supply. Supply voltages above +10 V may induce additional error due to device self-heating.
2. Measured at 6.0 V_{DC} excitation for 100 mmHg pressure differential. V_{FSS} and FSS are like terms representing the algebraic difference between full scale output and zero pressure offset.
3. Maximum deviation from end-point straight line fit at 0 and 200 mmHg.
4. Slope of end-point straight line fit to full-scale span at 15°C and +40°C relative to +25°C.
5. Slope of end-point straight line fit to zero pressure offset at 15°C and +40°C relative to +25°C.
6. Offset measurement with respect to the measured sensitivity when a 150 k Ω resistor is connected to V_S and V_{OUT+} output.
7. For a 0 to 300 mmHg pressure step change.

4 Package dimensions

Figure 3. Chip Pak package

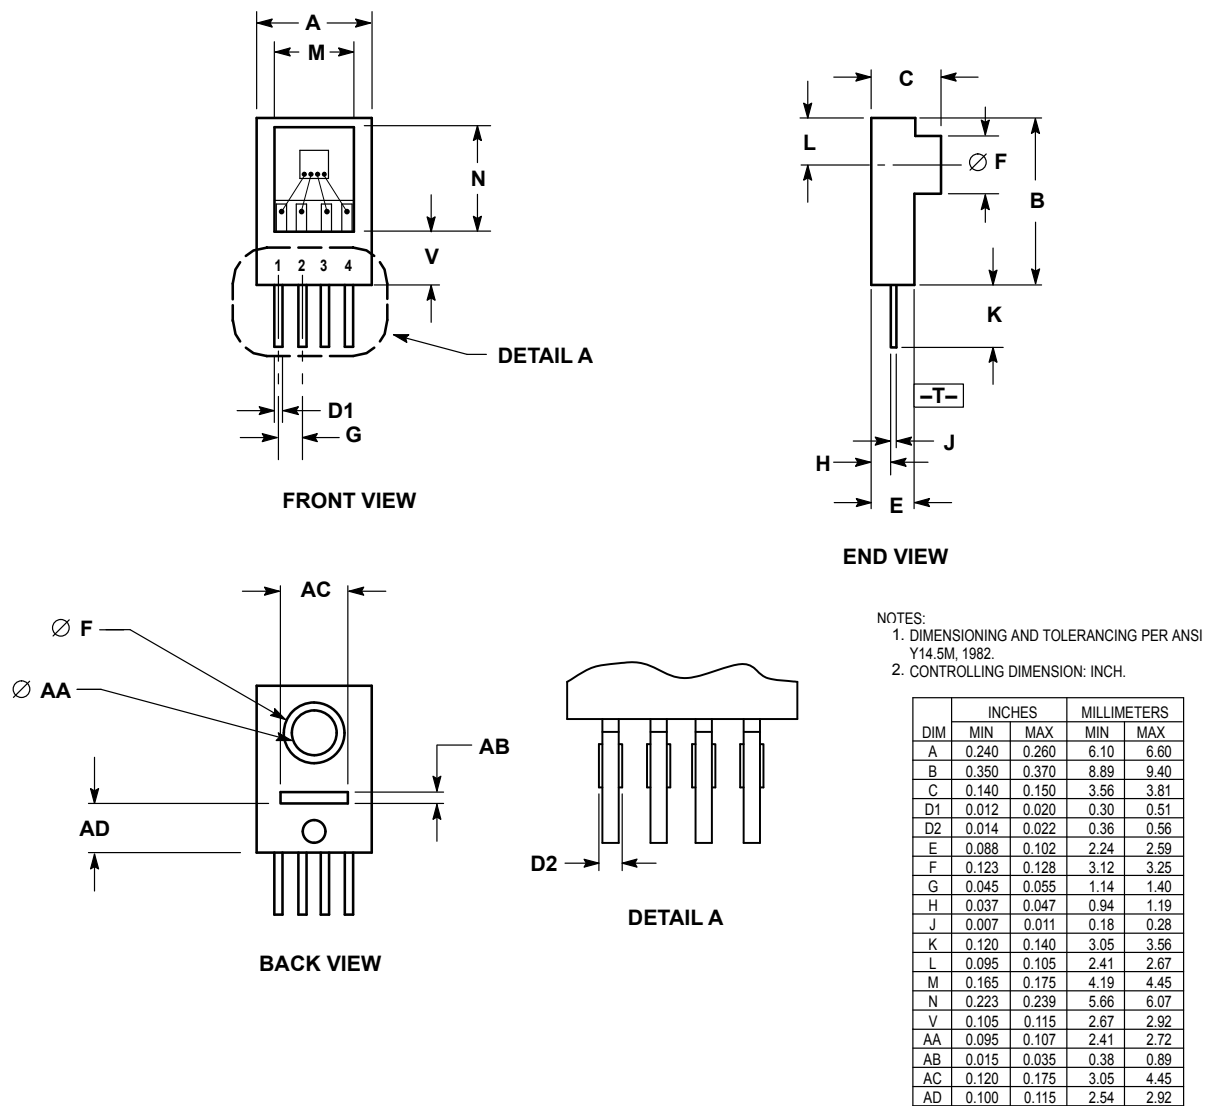

Revision history

Table 4. Document revision history

Date	Version	Changes
09-Jul-2026	1	Initial release from ST, rebranded NXP document

Contents

1	Ordering information	2
2	General description	3
2.1	Block diagram	3
2.2	Pinout	4
3	Mechanical and electrical specifications	5
3.1	Maximum ratings	5
3.2	Operating characteristics	5
4	Package dimensions	6
	Revision history	7

IMPORTANT NOTICE – READ CAREFULLY

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice.

In the event of any conflict between the provisions of this document and the provisions of any contractual arrangement in force between the purchasers and ST, the provisions of such contractual arrangement shall prevail.

The purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgment.

The purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of the purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

If the purchasers identify an ST product that meets their functional and performance requirements but that is not designated for the purchasers' market segment, the purchasers shall contact ST for more information.

ST and the ST logo are trademarks of ST. For additional information about ST trademarks, refer to www.st.com/trademarks. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2026 STMicroelectronics – All rights reserved